

SureGuard™ Correctional Chair

Instructions

Warning - Use of the SureGuard™ Correctional Chair without first reading and thoroughly understanding the instructions could cause injury or death.


The SureGuard™ Correctional Chair is intended to help control combative, self destructive, or potentially violent detainees. If used properly it can reduce the risk of physical harm to both the detainee and staff. Violent behavior may mask dangerous medical conditions therefore detainees must be monitored for and provided with medical treatment if needed. Detainees should not be left in the SureGuard™ Correctional Chair for more than two hours. The SureGuard™ Correctional Chair should **never** be used as a means of punishment.



Step 1.

Ensure that all of the detainee's personal property has been removed from them, to include jewelry, glasses, shoes, boots, socks, coat, hat and belt. They should only be clothed in their shirt, pants, or dress.

Note: The detainee should be handcuffed and wearing leg irons when warranted.

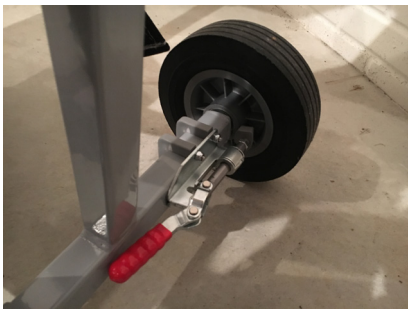

Step 2.

Set brakes by putting the head of the brake clamp piston into a slot in the wheel hub. It may be necessary to grip the wheel and roll it by hand to properly align the piston head. Push the red handle toward the wheel to lock the brake. Repeat on the other side.



Step 3.

Have the detainee sit in the seat, secure the lap belt free end in the lap belt clevis, and pull the handle until snug.

Note: To loosen the lap belt, insert a standard handcuff key in the lap belt buckle, and “push in” while pulling slack on the lap belt.



Step 4.

Place the chain of the leg irons behind the chair retainer. Secure the ankle strap by passing the free end around the front ankle and securing it to the ankle strap clevis. Then pull the ankle strap handle until snug while making sure the detainee’s heel is touching the rear of the foot plate. Repeat on the other ankle and then remove the leg irons after securing both ankle straps.



Step 5.

Attach the handcuff tether to the handcuffs.



Step 6.

Release the left wrist from the handcuffs and place the left arm on the arm rest of the SureGuard(tm) Correctional Chair. Secure the arm with the left arm strap making sure the wrist is flat on the arm rest. Pull the black vinyl strap snug and double latch the hook and loop strap around the left elbow. Repeat the process for the right arm.

Caution: Do not cut off circulation to the hand.

Note: To loosen the arm strap, insert a standard handcuff key in the buckle cover and push the cam in while pulling the strap to create enough slack to remove the arm.



Step 7.

Retighten the lap belt if necessary.



Step 8.

Fasten the shoulder strap by passing the free ends over the shoulders, under the armpits, and secure them to the shoulder strap clevises located on the back of the chair. Then tighten by pulling down on the shoulder strap handle.

Caution: Do not wrap the straps around the chest, head, or neck.

ADDITIONAL CAUTIONS

Caution: Violet behavior may mask dangerous medical conditions. Detainees must be monitored continuously and provided medical treatment if needed.

Caution: Handcuffs and leg irons must be removed as soon as possible to prevent injury.

Caution: Belts and straps may need to be loosened to insure adequate blood flow. The SureGuard™ Correctional Chair must always be used in the upright position, leaving the chair on its side or back may cause injury or death to the detainee. Detainees should not be left in the SureGuard™ Correctional Chair for more than two hours. This time limit was established to allow for the detainee to calm down, and if needed it allows for the handlers to seek medical or psychological help for the detainee. This two hour time limit may be extended, but only under medical supervision (Doctor/Nurse). This extended time period must not exceed eight hours and range of motion exercises must be performed regularly. Therefore we do not recommend anyone be left in the SureGuard™ Correctional Chair for more than ten hours total.

Safety Restraint Chair Inc.

2511 N 159th Street

Omaha, NE, 68116

Phone: (712) 263-5291

info@restraintchair.com